



PLAIN STRETCH
226 Lime



PLAIN STRETCH
201 Jade



PLAIN STRETCH
211 Spruce



PLAIN STRETCH
205 Sage



PLAIN STRETCH
139 Aqua



PLAIN STRETCH
129 Ocean



PLAIN STRETCH
292 Racing Green



PLAIN STRETCH
815 Buff



PLAIN STRETCH
103 Denim



PLAIN STRETCH
105 Indigo



PLAIN STRETCH
702 Chocolate



PLAIN STRETCH
804 Fawn



PLAIN STRETCH
107 Cornflower



PLAIN STRETCH
127 Lilac



PLAIN STRETCH
703 Mink



PLAIN STRETCH
906 Ash



PLAIN STRETCH
117 Royal



PLAIN STRETCH
600 Pink



PLAIN STRETCH
509 Plum



PLAIN STRETCH
902 Slate



PLAIN STRETCH
949 Noir



PLAIN STRETCH
400 Red



PLAIN STRETCH
618 Blush



PLAIN STRETCH
402 Orange



PLAIN STRETCH
405 Crimson



PLAIN STRETCH
429 Chili



PLAIN STRETCH
312 Old Gold



PLAIN STRETCH
301 Saffron



PLAIN STRETCH
313 Yellow

panvellestretchTM Technical Information

waterproof upholstery patent granted GB 2424654 B

Composition: Polyester/Lycra blend with FR coating

Weight: 400 gsm +/- 5%

Width : 137cm (54")

Flame Retardant: BS7176 Medium Hazard EN1021 Source 1 & 2, BS5852 Source 5
BS5852: 2006 Ignition Source 5
EN1021-1/2
CAL TB 116 and 117, NFPA 260 (USA)
Marine Standard IMO A.652 (16)

Martindale Abrasion: 60,000+ Martindale Rubs

Martindale Pilling: Grade 4 minimum

Colour Fastness to Light: Grade 6

Colour Fastness to Rubbing: Dry >3-4, Wet >3

Anti-Microbial/ Anti-Fungal: Will not support microbial growth including:

- Aspergillus Niger • E.Coli • Altinata • Salmonella • Penicillium
- Staphylococcus Aureus (MRSA) • Cladosporium Herbarism

AATCC test method 147 - 1998 AATCC test method 30 - 1998

Additional Features: Two-way stretch for pressure relief situations.
Waterproof, Breathable, Anti-MRSA, Anti-microbial, Anti-fungal and stain resistant.
Excellent stain removal has been observed for:

- Blood • Urine • Grease • Ink • Grape Juice • Iodine • Betadine
- Ketchup • Mustard • Salad Dressing • Suntan Lotion

Recommended Cleaning:

- Vacuum and wipe clean regularly with a microfibre cloth and water to remove dust particles and prevent build up of soiling.
- Remove spillages promptly with an absorbent dry cloth.
- If heavier soiling has been allowed to accumulate, try using water only first, then use a mild liquid soap, ensuring that cleaning products are **removed** fully, as they inhibit the stain repellent. Take care not to cause abrasive damage.
- Wipe off bodily fluids promptly (within 15 minutes) with cold water and then clean as above. For extreme soiling/infection control purposes use a 5% sodium hypochlorite (bleach) solution, Haz Tabs or Chlor-Clean.
- Steam cleaning is permitted for infection control purposes, in accordance with the manufacturer's guidelines.
NB: Steam cleaning is an effective sanitizer (as are Haz Tabs and Chlorclean) but it is not a good cleaner. Cleaning with a microfibre cloth and water is more effective. Steam and heat from steam cleaners actually seal in oily residues from bodily fluids, etc.
- Do not machine wash (except Panvelle wash), fully immerse, dry clean or apply other chemicals.
- Microfibre cleaning cloths are extremely effective even **without soap**, which is helpful as soap residues can clog the fibre making it difficult to clean.
Tests conducted by Satra Laboratories showed that a microfibre cloth and water alone were just as effective in removing marks and stains as using proprietary cleaner.

Continuity: Although every effort is made to ensure that fabrics ordered match the colours in this pattern card, slight variations may occur from batch to batch.

Please note Panaz reserve the right to update product specification at their discretion.




Certificate No: 2358

Panaz[®]

Healthcare

For further information please visit:
www.panaz.com

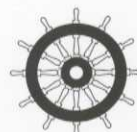

BV 0062



BS5852
CRIB 5
EN1021/2

Head Office

Panaz Ltd, Spring Mill, Fence, Nr Burnley, Lancashire. BB12 9HP England
Tel: +44 (0) 1282 696969 Fax: +44 (0) 1282 611519 Email: admin@panaz.co.uk

Panaz Germany
Nortzstrasse 20
67152 Ruppertsberg
Germany

Tel: +49 6326 967 528
Fax: +49 6326 980 553
email: Uwe.Ney@t-online.de

Panaz France
7 rue Ferdinand Fabre,
75015 Paris
(Métro Convention - Ligne 12)
France

Tel: +33 (0) 1 40 25 05 07
Fax: +33 (0) 1 40 25 09 64
email: patrick.martinez@noos.fr

Panaz Holland
Rosebank Projekttextiel,
Hooigracht 42
2514 BG The Hague
Holland

Tel: +31 70 392 4565
Fax: +31 70 356 9585
email: rosebank@planet.nl

Panaz (USA) Inc
2102 Business Center Drive
Suite 215B
Irvine, CA 92612
USA

Tel: +1 949 253 4163
Fax: +1 949 253 4167
email: sales@panaz.com