




VYFLEX 814 Espresso

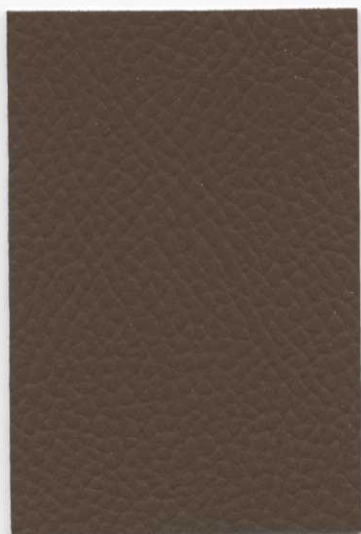


VYFLEX 807 Mushroom

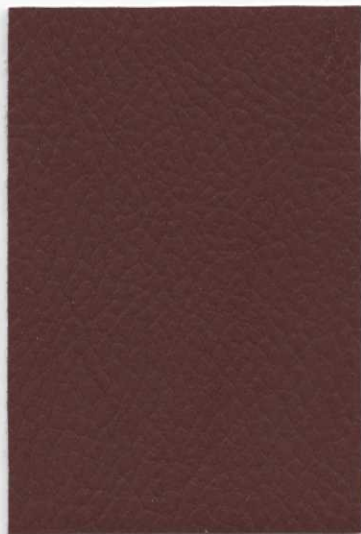


VYFLEX 407 Burgundy

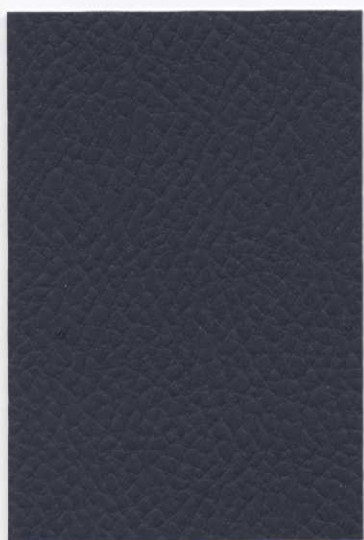


VYFLEX 116 Navy

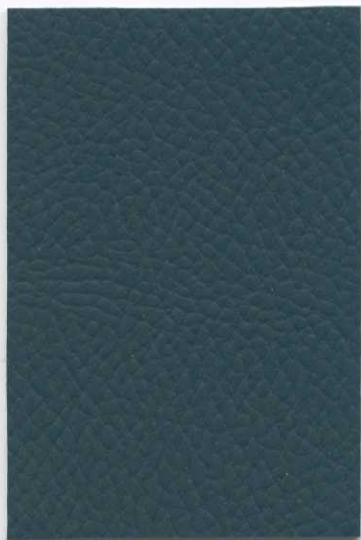


VYFLEX 203 Emerald

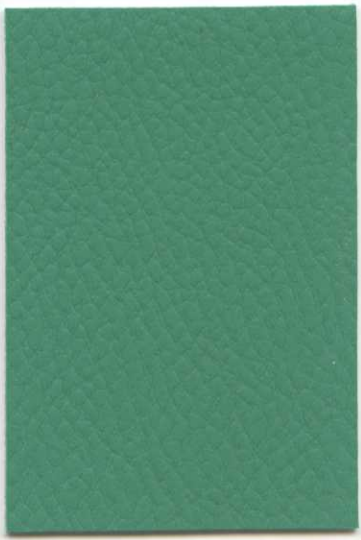


VYFLEX 201 Jade

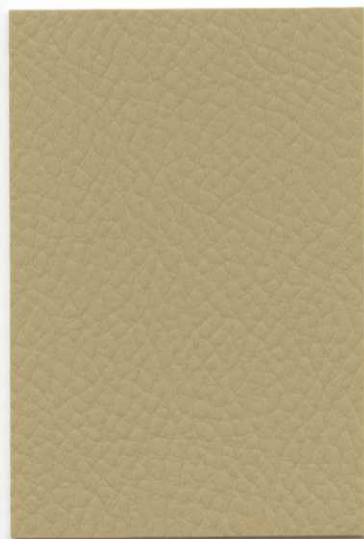


VYFLEX 823 Chablis

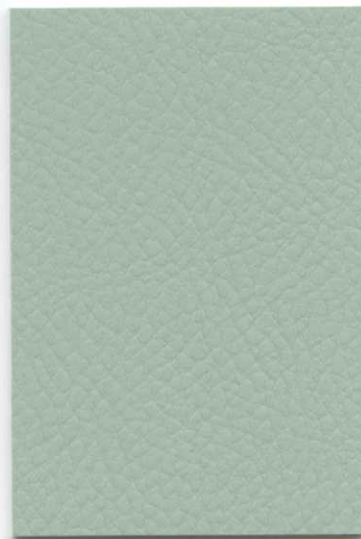


VYFLEX 155 Duck Egg Blue

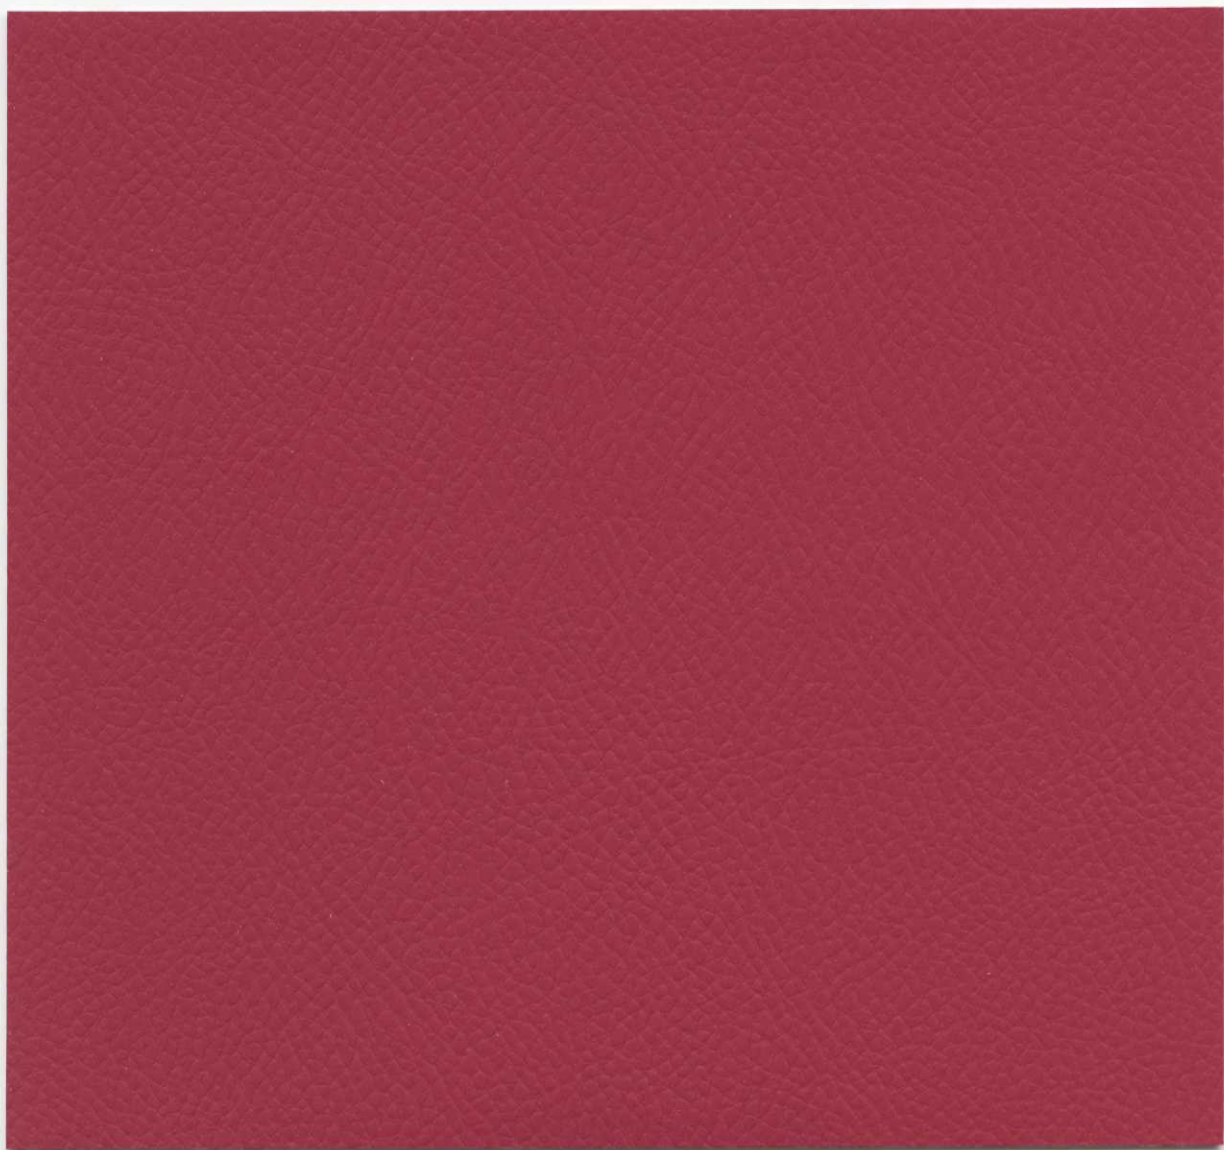

VYFLEX 609 Rose

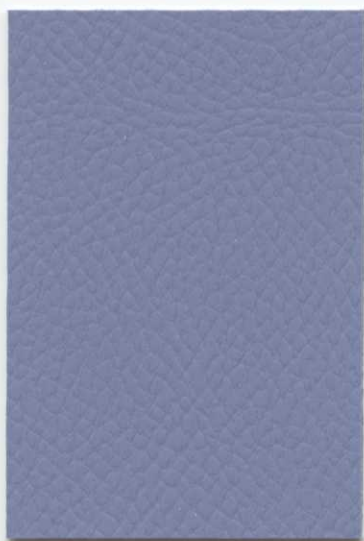

VYFLEX 198 Hyacinth

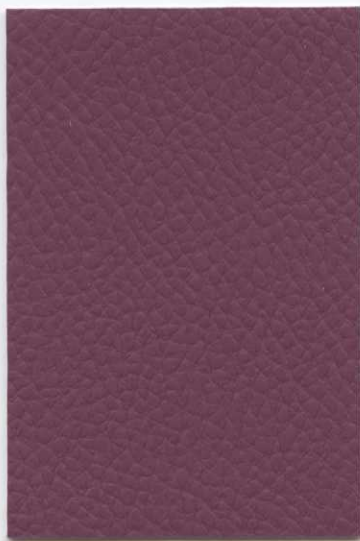

VYFLEX 624 Mulberry



VYFLEX 404 Henna

Pamaz[®]
Healthcare



shieldplus[™]
technology

Acryltron[™]

VyflexPlus[™]

pressure relief vinyl



Upholstery



Flame Retardant
To Crib 5



Multi-Directional
Stretch



Waterproof



Anti Microbial
& Anti Fungal



Stain Resistant

Another innovative product in the Panaz

Intelligent
textiles range
performance fabrics

VyflexPlusTM Technical Information

pressure relief vinyl

Composition: Coating: PVC/PU/Acrylic
Basecloth: Cotton/Elastane

Weight: 760 g/m² +/-5%

Width: 140cm (55")

Flammability: BS5852:2006 Ignition Source 5
EN1021-1/2
NFPA 260

Abrasion Resistance: 100,000+ Martindale rubs

Colour fastness to light: Grade 4-5

Colour fastness to rubbing: Wet 4, Dry 4

Features:

- Shield Plus Anti-Microbial and Anti-Fungal Protection - Inc. C Diff Spore
- Waterproof
- Scratch Resistant with colour solid through to the base cloth
- Multi-Directional Stretch for use in pressure relief seating
- Improved Stain Resistance with **AcryltronTM**

Vyflex Plus multi-directional stretch vinyl is recommended for use with the new generation of pressure relief foams to provide pressure relief seating within all healthcare environments: hospitals and care homes.

Recommended Cleaning:

- Wipe clean regularly with a damp microfibre cloth and water to remove dust particles and prevent build up of soiling. Clean regularly with a damp cloth to remove dust particles and light soiling.
- Remove spillages promptly with an absorbent dry cloth.
- For general soiling, use a soft brush/microfibre cloth taking care to avoid abrasive damage to surface and use tepid soapy water (non-alkaline). Rinse clean with water and dry with an absorbent cloth.
- Bodily fluids should be removed promptly (within 15 minutes) with cold water and then cleaned as above.
- Extreme soiling/infection control purposes use a 5% sodium hypochlorite (bleach) solution, Haz Tabs or Chlor-Clean.
- Steam cleaning is an effective sanitizer (as are Haz Tabs and Chlor-Clean) but is not a good cleaner. Cleaning with a microfibre cloth and water is more effective. Steam and heat from steam cleaners actually seal in oily residues from bodily fluids, etc.

If steam cleaning is essential, use infrequently for emergency infection control purposes only and in accordance with the machine manufacturer's recommendations. As we are unable to comment on the variety of machines in the marketplace or on the operator's handling, care should be taken for the sake of both the upholstery fabric and the wooden frame and we are unable to guarantee these.

- Do not machine wash or dry clean.
- Do not use furniture polish, stain remover or solvents.
- Remove indigo dye from denim and canvas garments immediately. Dye/inks will produce permanent staining if not dealt with promptly.

Continuity: Although every effort is made to ensure that fabrics ordered match the colours in this pattern card, slight variations may occur from batch to batch.

Please note Panaz reserve the right to update product specification at their discretion.



Certificate No: 2358

Panaz[®]

Healthcare

For further information please visit

www.panaz.com



BS5852
CRIB 5
EN1021-1/2

Head Office.
Panaz Ltd, Spring Mill, Fence,
Near Burnley,
Lancashire. BB12 9HP
England
Tel: +44 (0) 1282 696969
Fax: +44 (0) 1282 611519
email: admin@panaz.co.uk

Panaz France
7 rue Ferdinand Fabre,
75015 Paris
(Métro Convention - Ligne 12)
France
Tel: +33 (0) 1 40 25 05 07
Fax: +33 (0) 1 40 25 09 64
email: patrick.martinez@noos.fr

Panaz Germany
Nortzstrasse 20
67152 Ruppertsberg
Germany
Tel: +49 6326 967 528
Fax: +49 6326 980 553
email: Uwe.Ney@t-online.de

Panaz (USA) Inc
2102 Business Center Drive
Suite 215B
Irvine, CA 92612
USA
Tel: +1 949 253 4163
Fax: +1 949 253 4167
email: sales@panaz.com